

5.0 SPEAKER MOUNT USER'S GUIDE



GB

REQUIRED TOOLS

- A. 5/32" hex wrench (supplied)
- Drill bits:
 - B. Wood 5/32"
 - C. Drywall - 1/4"
 - D. Masonry - 5/16" carbide tipped
- E. Crescent or 7/16" (11mm) open end wrench
- F. Phillips screwdriver
- G. Electric drill
- H. Hammer (masonry only)

KIT SPECIFICATIONS

- Spécifications de l'ensemble
- Especificaciones del Kit
- Spezifikation des Montagesatzes
- Caratteristiche tecniche
- Specificaties van de kit

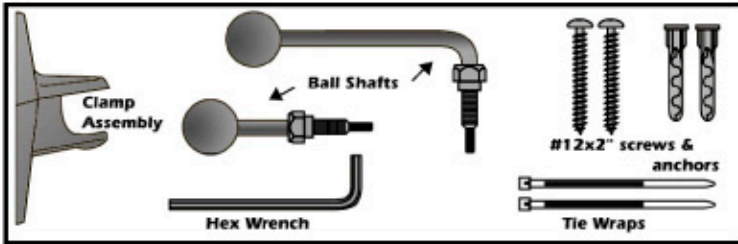


MOUNTING OPTIONS

- Possibilités de montage
- Posibilidades de instalación
- Montagemöglichkeiten
- Opzioni di montaggio
- Montageopties



CLAMP ASSEMBLY ORIENTATION

- Orientation du bloc d'attache
- Orientación de la sujeción
- Ausrichtung des Halterungssatzes
- Orientamento della mensola
- Oriëntatie van klemstuk

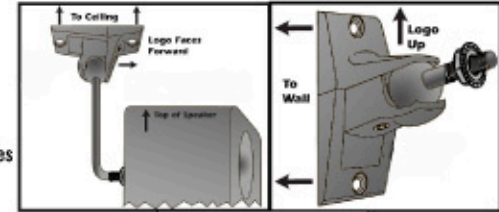

ATTACHING THE BALL SHAFT

- Fixation du raccord à tête sphérique
- Atornillar el eje gíatorio
- Anbringen der Kugelgelenkstange
- Collegamento del braccio
- Vastmaken van kogelas




1. MOUNTING THE CLAMP ASSEMBLY

A) Mark Location


Mark mounting holes with pencil

- B) Mounting onto Wooden Stud. Use 5/32" drill bit
- Minimum mounting hole depth: 2" (51mm)

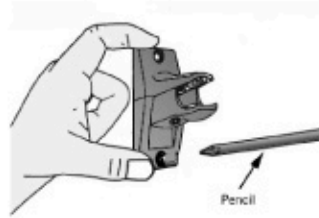


C) Drywall Mounting

- Use 1/4" drill bit
- Insert anchor into hole

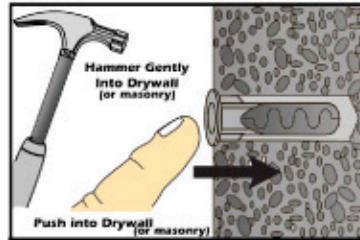


D) Mounting into Masonry

- 5/16" (8mm) carbide tipped bit and masonry or hammer drill.
- Wear eye protection.
- Minimum mounting hole depth: 2" (51mm)
- Insert anchor into hole

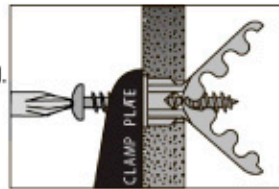

E) Mount Clamp Assembly

- Attach clamp assembly with supplied screws.

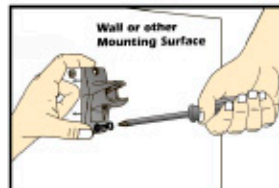

2. JOINING BALL SHAFT AND CLAMP ASSEMBLY


Open clamp assembly enough to accept ball.

"Pop" ball into the clamp assembly.

Set speaker to desired position.

Tighten clamp assembly until snug.

Note: Speaker weight must be fully supported during the tightening process.

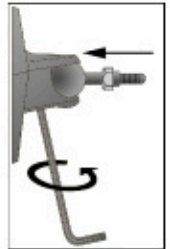

3. FINAL ADJUSTMENTS

Use tool to tighten in 1/2 turn increments. Do not over tighten.

To change speaker angle, loosen tension screw, re-position speaker, then re-tighten tension screw.

To rotate speaker cabinet, loosen jam nut, rotate speaker into desired position, then re-tighten jam nut



4. SECURING THE SPEAKER WIRE

